



Technical News

Sony Imaging Products & Solutions Inc. © 2018

Ref. No.	Issuer company	Issue (yyyy/mm/dd)	Last modific	Last modification (yyyy/mm/dd)	
PV18NEX531	Digital Imaging Group	2018/09/14			
Subject					
Prevent lens front breakage					
Model (System model)	Destination	Serial number		Color	
SEL2470GM	All	1800001 ~	1883269		

SYMPTOM

The front of the lens breaks due to drop



CAUSE


The structure was designed to transmit shocks easily

REQUIRED PART / TOOL / SOFTWARE

The following parts are changed and added.

4-567-670-01 ⇒ 4-567-670-02: ORNAMENTAL PLATE

4-730-022-01: ORNAMENTAL PLATE SHEE T

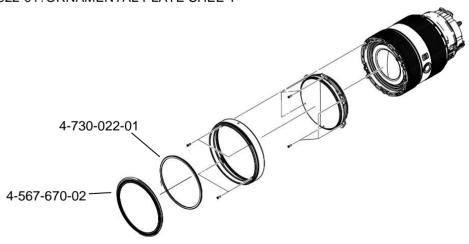

1/2

Conditions of Use:

(1) Only Sony Group employees are permitted to access and use this information. To disclose or disseminate to any other parties is forbidden.

(2) Destroy or erase any and all portion of this information promptly in an irrecoverable and secure fashion, after achieving the purpose of use of this information.


(3) Do not copy, replicate, reproduce, alter, translate, transmit, sell, lease, or distribute this information in whole or in part without the prior written permission of the author.

(Notwithstanding foregoing, it is permitted to copy and distribute this information to the Sony Group employees whose duties a need-to-know.)
(4) Please notify immediately any leakage, loss, theft, misappropriation, or other misuse of this information by e-mail to the following address:

somk-gcs-tissnexim-adm Revision of Information:

This information may be changed or updated at any time without any prior notice. Please confirm that this information is up-to-date before using it.



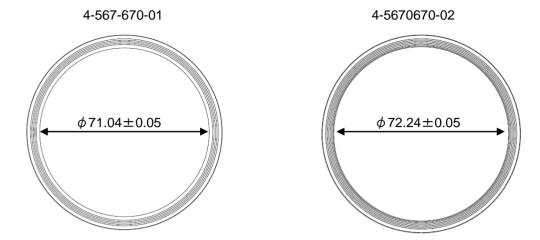

SOLUTIONIf you accepted with the above symptoms, please take the following measures.

- •Replace the 1ST LENS ASSY (A-2072-006-A).
- *In case of the assembled ORNAMENTAL PLATE was 4-567-670-01:

 1. Add ORNAMENTAL PLATE SHEET (4-730-022-01).
- 2. Exchange the ORNAMENTAL PLATE to 4-567-670-02